

Last updated: 12/5/2023

Updated by: Max Schafer

x3373

schaferm@grinnell.edu

GOPRO (HERO 11 BLACK)

1. BEFORE USE

- Ensure battery and microSD card inserted – the side tab pulls down and out, and may be hard to open (when properly secured, the GoPro is waterproof)
- Close and secure the battery/microSD card area
- Check the unit and all accessories for damage and cleanliness, and report to Max or Circulation Staff if anything is amiss (a small card in the case will indicate the included components)

2. BASICS



- Hold the Mode button on the side of the camera until the screen becomes active
- Swipe left and right to select a format between photo, video, and time lapse
- Press the shutter button at the top to take photos or videos

- Swipe up to view media

- Tap the trash icon to delete unneeded media

- Insert the microSD card into an adapter or directly into your device to export media

3. ADVANCED

Additional features and notes include:

- Download the GoPro Quik app to remotely control capture, preview media, and transfer media directly to your device using USB-C

- Swipe down to adjust basic settings in the dashboard, and swipe left from this dashboard to access “Pro” controls, allowing for a much greater range of options

- The screen will adjust to portrait or landscape orientation, but some settings can only be adjusted while in landscape orientation

- The front-facing screen can be adjusted to show a preview, a status screen, or turned off. For better battery life, keep this off

- Operation Manuals are available for additional support – see Max or search for “GoPro Hero 11 Black” online

4. WHEN FINISHED

- Save all recordings to your own devices, playing them back to ensure they sound and look correct

- Delete recordings from the GoPro

- Leave microSD card and battery inside the GoPro

- Bring item and all accessories to the Circulation Desk for checking in